


CARBON CRANKSET INSTALLATION


INSTALLATION

DRIVE-SIDE

1. MOUNT chainring onto splined crank interface correctly aligning the engraved PEDAL indicator towards the pedal insert.
2. TIGHTEN in an alternating sequence A-B-A-B, until the torque is achieved for each bolt.

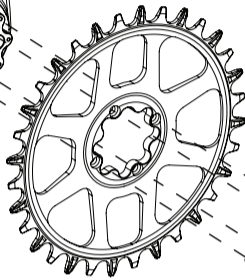


USE 9mm BOLTS ONLY

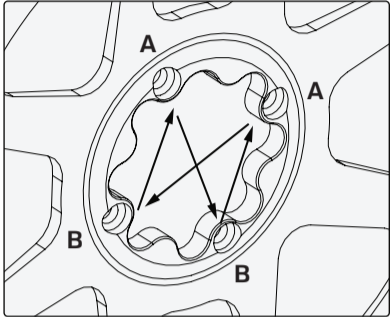


T20 4Nm

NON-DRIVE-SIDE

1. ENSURE APS™ is properly seated on crank arm before installing into frame.

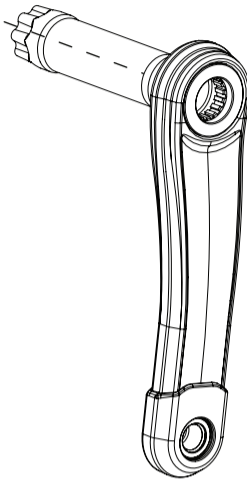

④
8mm HEX
40-45Nm

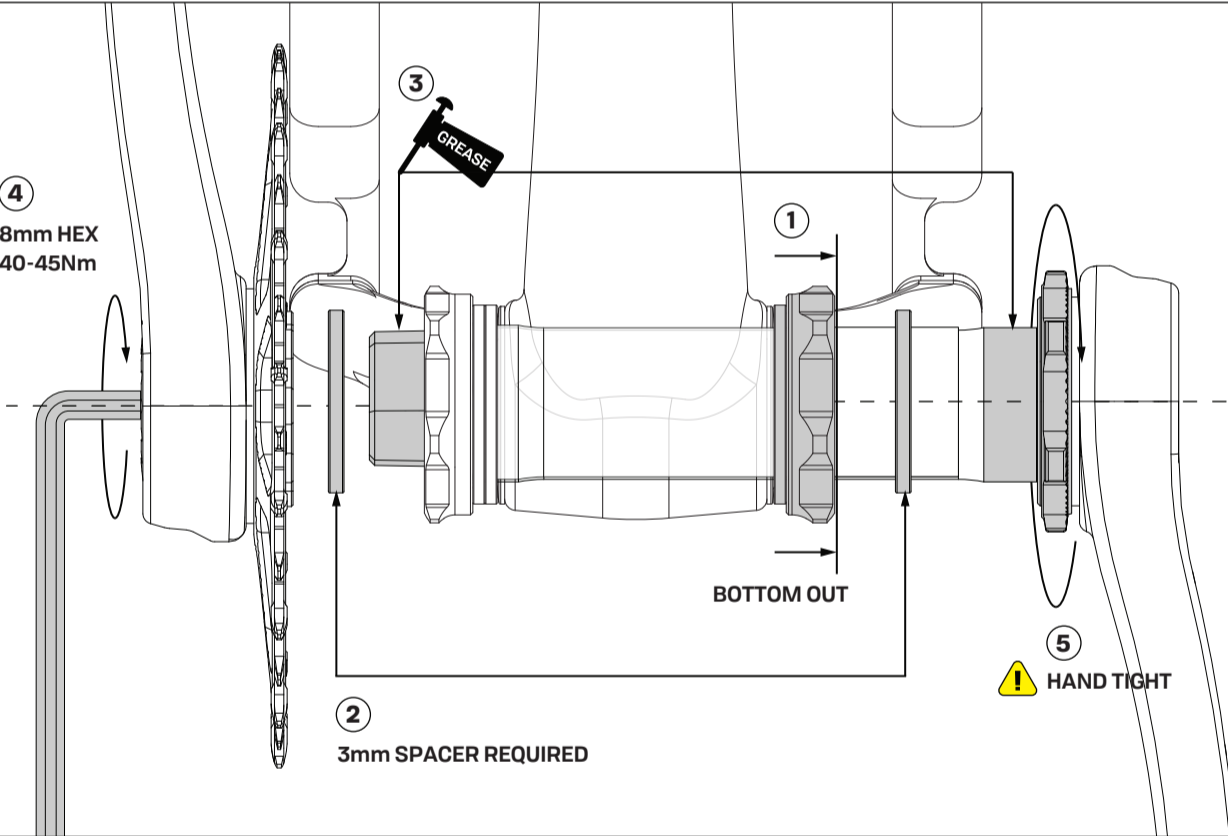

MAINTENANCE

1. Self extractor maintenance: GREASE each component.

20Nm
LEFT HAND THREAD

